




# Olympus Stylus 1010 LCD Display Replacement

Replace the LCD Display in your Olympus Stylus 1010.

Written By: Curtis Reedy

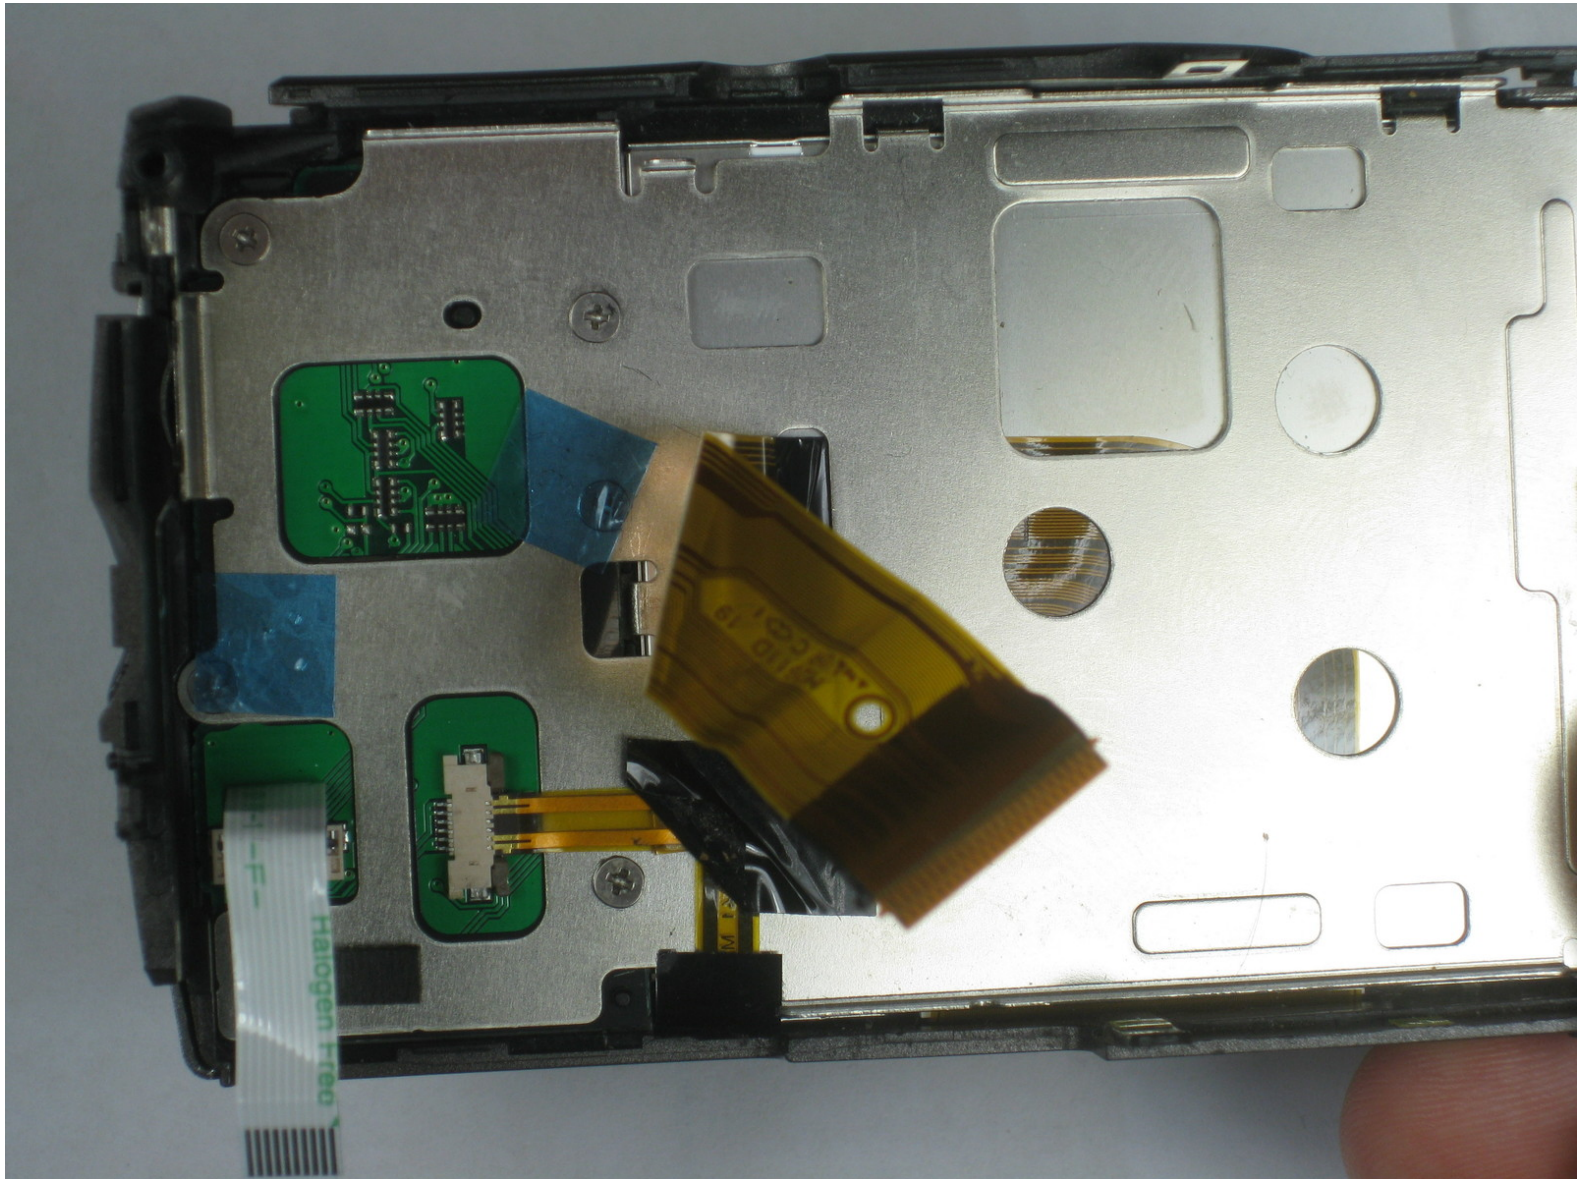

## INTRODUCTION

Use this guide to replace the LCD.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Case



- Unscrew the bottom and right side panel screws using a #00 screwdriver. (5 screws)

## Step 2



- Remove the right side panel by pulling off the large silver piece.



### Step 3



- Unscrew the remaining side and front panel screws using a #00 screwdriver. (3 screws)

### Step 4




- Using your thumb and forefinger, pull off the silver name plate and silver "T-shape" piece. (2 pieces)

## Step 5



- Remove the black front panel by sliding it towards the lens and then pulling it up off the camera.


## Step 6

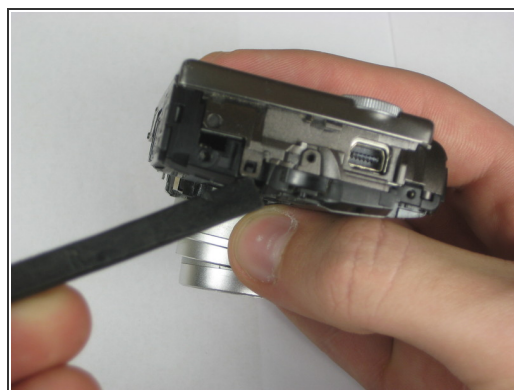

- Remove 3 screws from the front of the camera using a #00 screwdriver.
- Lift the two tabs to separate the case using a spudger. (one tab on top and one tab on the right side)




## Step 7

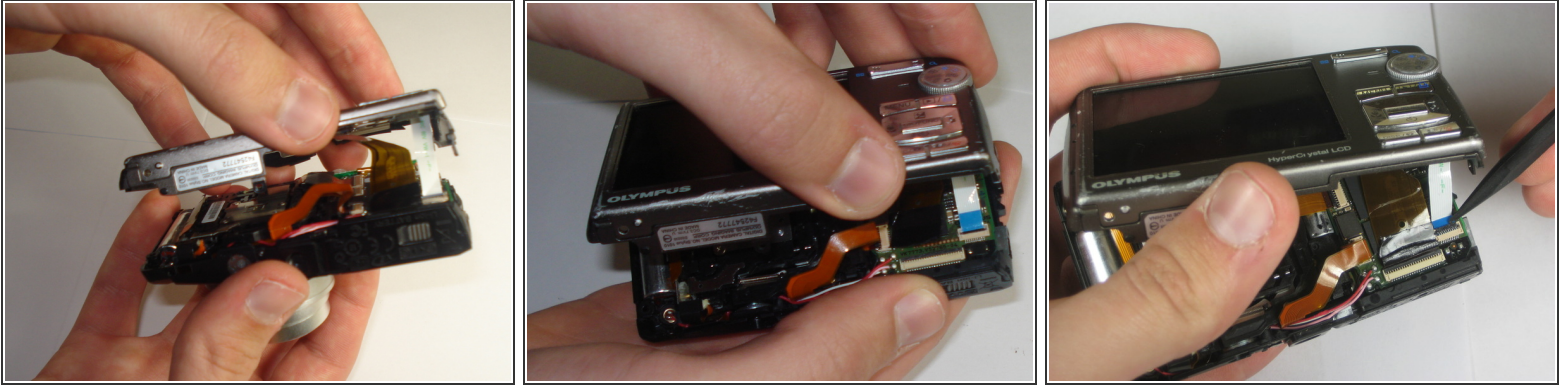



- Using a plastic spudger, lift up the black clips.
- Still using the plastic spudger, detach the gold connector strip and white connector strip.
- Using both hands, pull the camera apart into two pieces.

## Step 8 — LCD Display

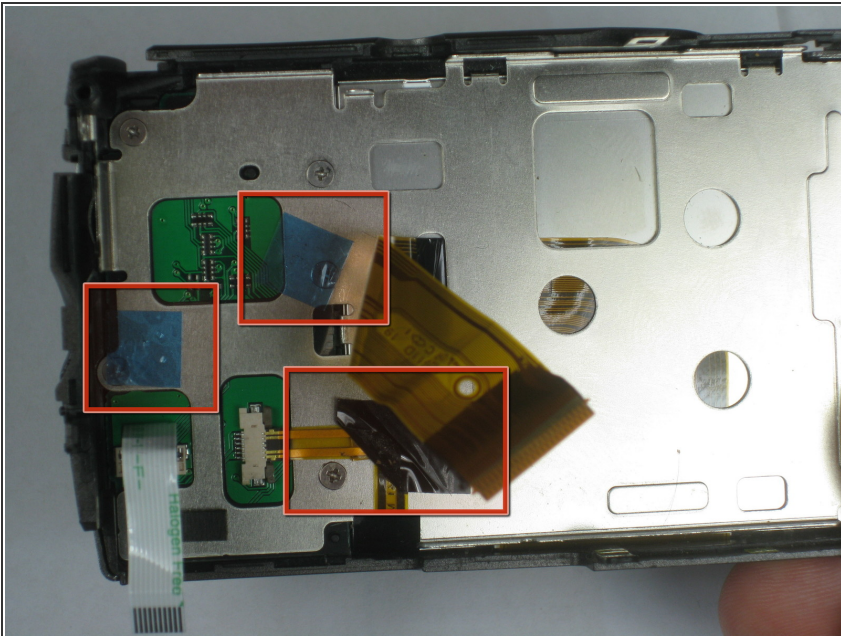


- Peel up the blue and black tape. This can be done with a spudger.

## Step 9

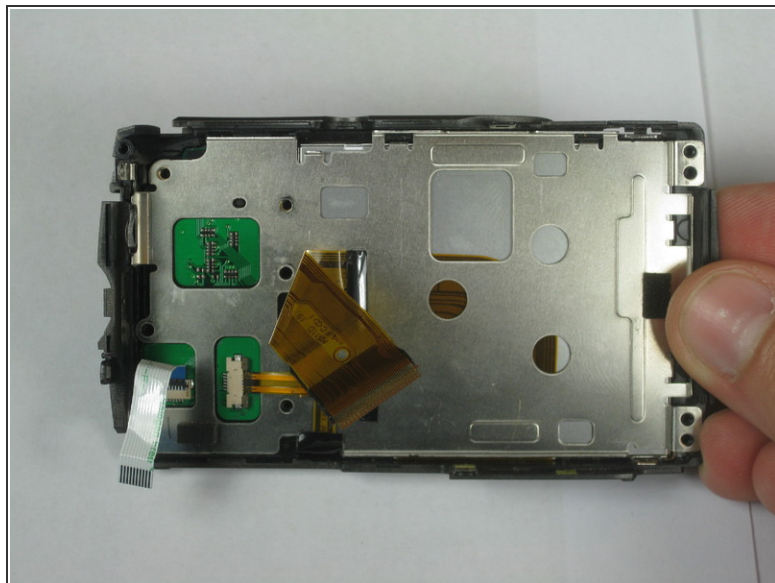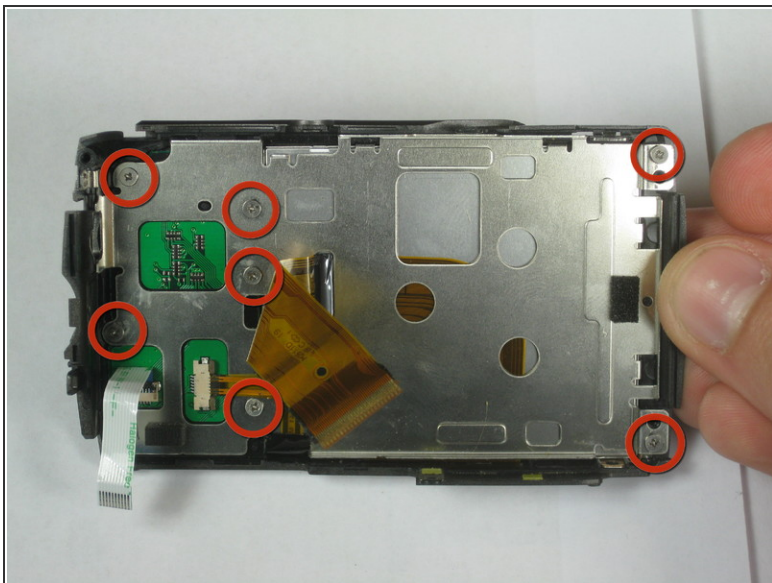

- Unscrew the screws. (6 screws)( photo shows 7 screws -editorial comment)

## Step 10

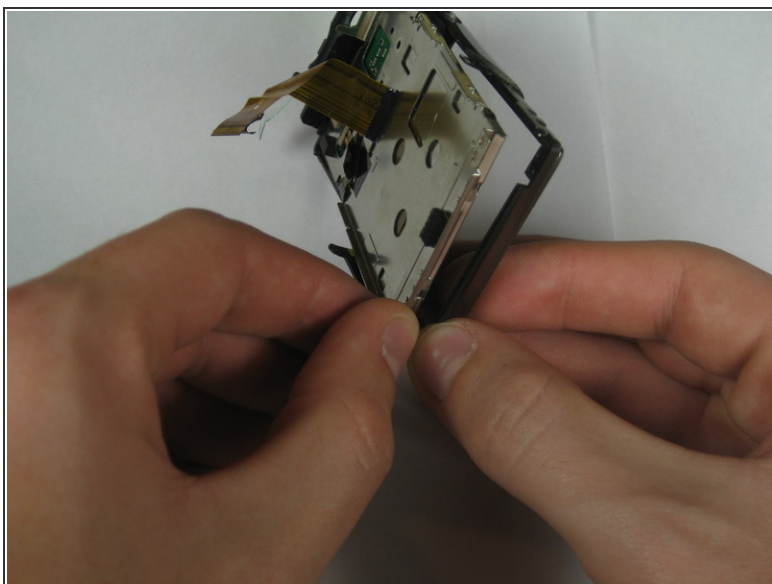

- Push out the LCD screen by pushing on the screen side.

To reassemble your device, follow these instructions in reverse order.

